


## DETAIL: Modified Bitumen (Mod Bit) Low Slope Roof

### GENERAL DETAILS – AC SUPPORT STANCHIONS – ROOF COATING RESTORATION

This detail drawing is intended to show the generally recommended procedure for dealing with the condition shown. Actual field conditions may vary. When such conditions vary slightly from the drawing, the intent and industry best practices are to be used. Any question, contact Aldo Products Company, Inc., Technical Department.

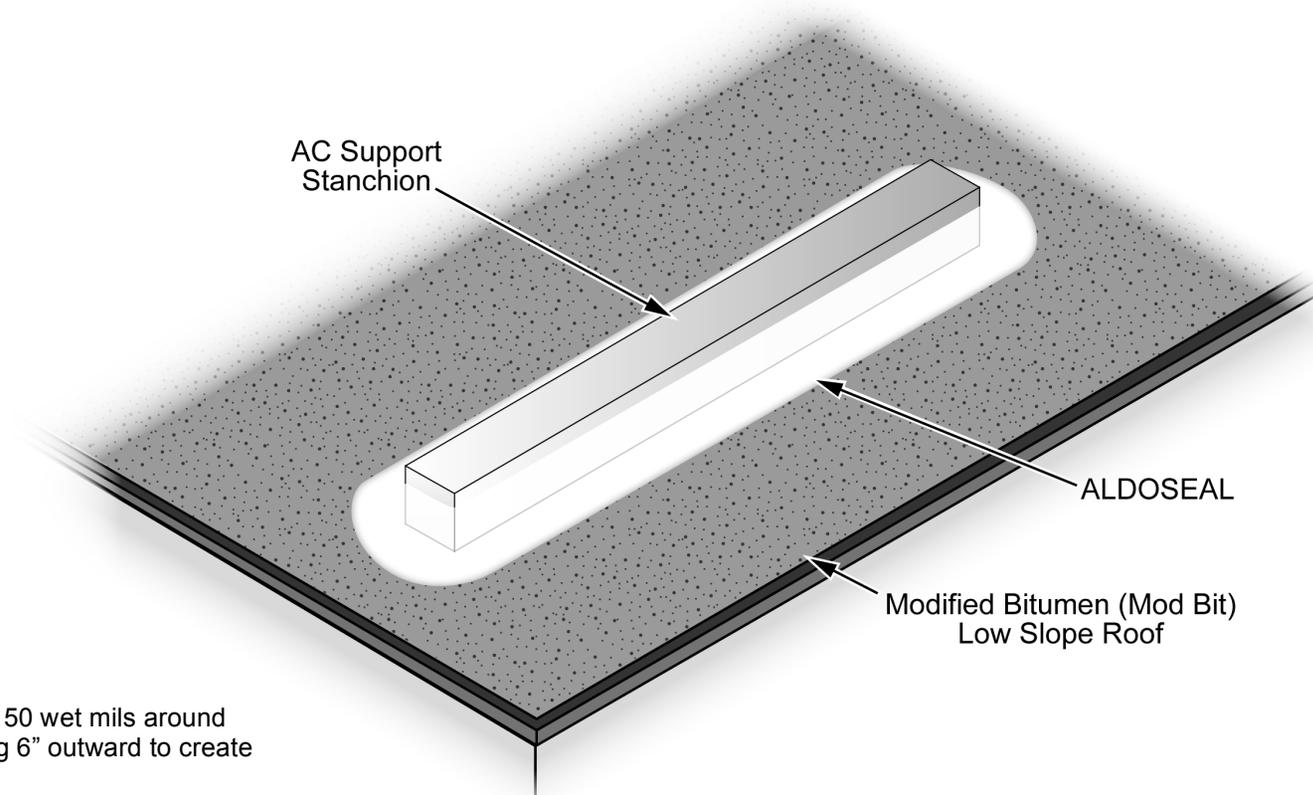

1. Apply a minimum of 50 wet mils around stanchion, feathering 6" outward to create positive drainage.
2. Ensure all voids between stanchion and roof membrane are completely filled.

Note: Support stand must have remaining service. If deteriorated, it must be replaced and membrane repaired prior to ALDOSEAL application.

Option: If required by specification, ALDOSEAL fabric is used in a three course application method with ALDOSEAL product of choice. Contact Aldo Products Company, Inc., for assistance.